CONSUMER ELECTRONICS

PHILIPS

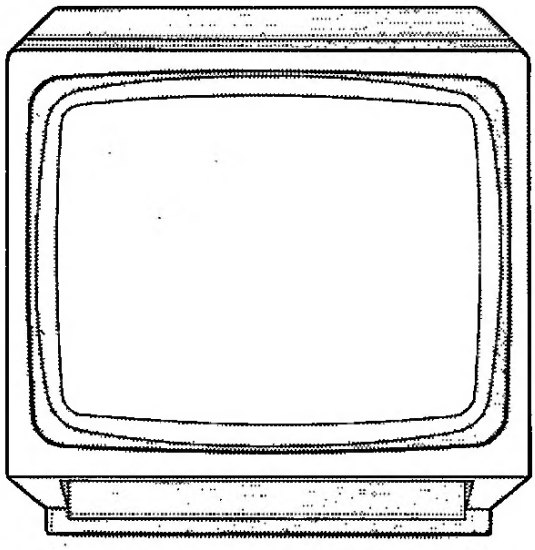

14CE1000

COLOUR TELEVISION
FARBFERNSEHER
TÉLÉVISEUR COULEUR
KLEURENTELEVISIE
TELEVISORE A COLORI
FARVEFJERNSYN
FARGE-TV
FÄRG-TV
VÄRITELEVISIO

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

English	New	Press button ◇ using a pencil.
Deutsch	Neu	Mit einen Bleistift Taste ◇ drücken.
Français	Nouveau	Pressez la touche ◇ à l'aide d'un crayon.
Nederlands	Nieuw	Druk met een potlood toets ◇ in.
Italiano	Nuovo	Premete il tasto ◇ usando una matita.
Español	Nuevo	Pulse con un lápiz la tecla ◇.
Português	Novo	Aperte o botão ◇ com a ajuda dum lápis.
Dansk	Ny	Tryk knap ◇ ved hjælp af en kuglepen.
Norsk	Ny	Trykk inn knappen ◇ ved hjelp av en blyant.
Svenska	Ny	Truck på knapp ◇ med en blyertspenna.
Suomi	Uutta	Paina kynällä painiketta ◇.
Ελληνικα	Νέο	Πιέστε το πλήκτρο ◇ χεησιμοποιώντας, ένα μολύβι.

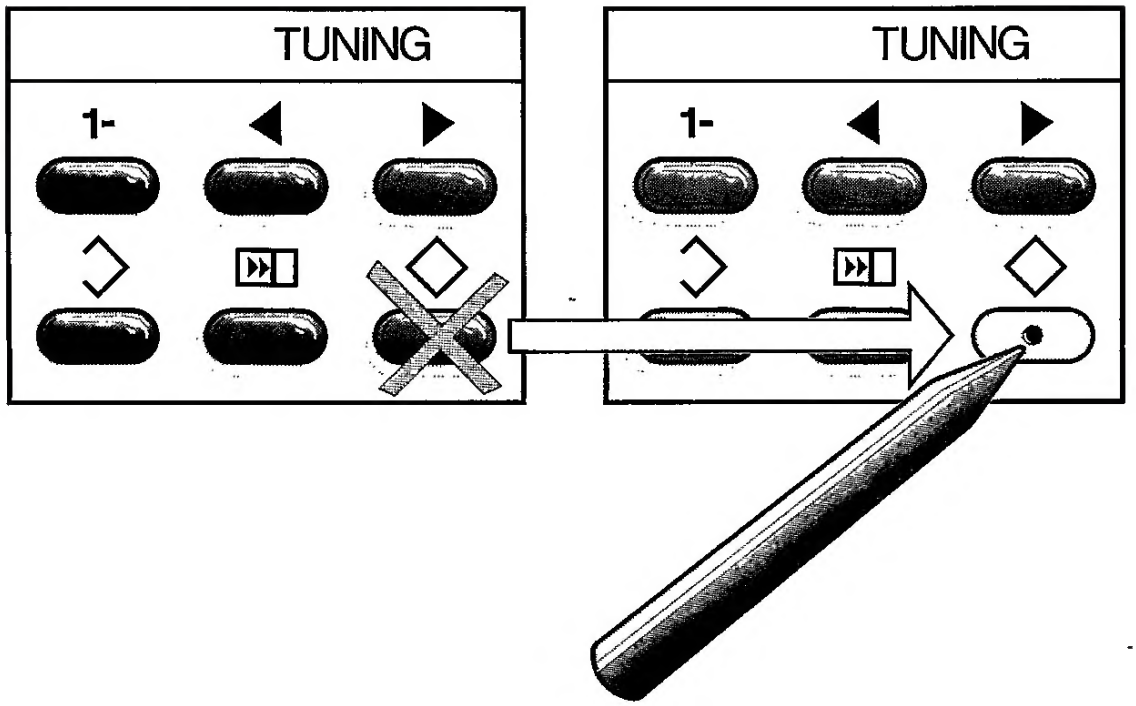

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

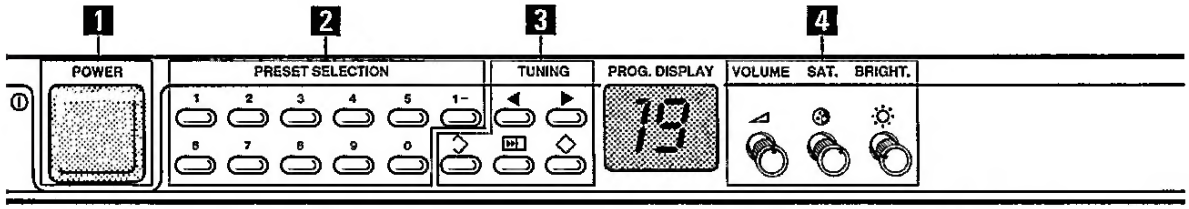

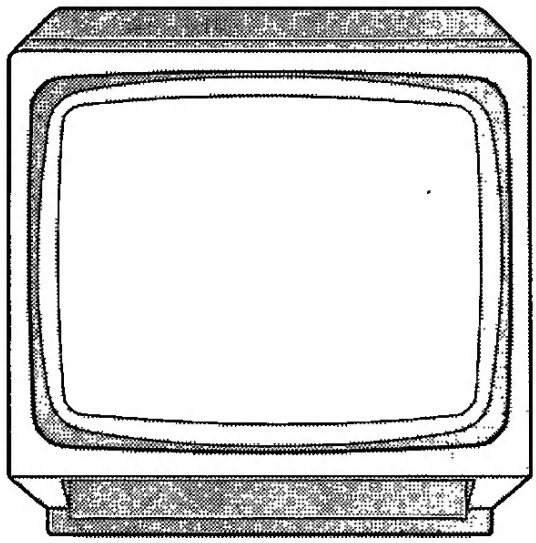

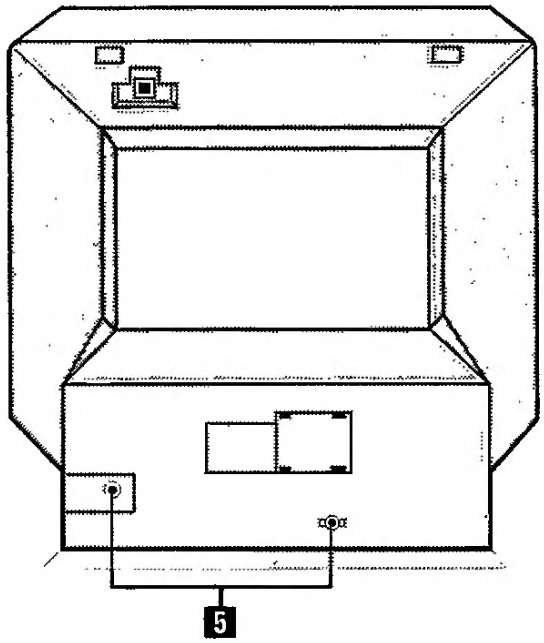

Downloaded from www.Manualslib.com manuals search engine

English	**Operating instructions** Page 1-4	**Attention!** ● Always open this flap page first.
Deutsch	**Bedienungsanleitung** Seite 5-7	**Achtung!** ● Immer zuerst dieses Umschlagblatt öffnen.
Français	**Mode d'emploi** Page 8-10	**Attention!** ● Commencez toujours par ouvrir ce rabat.
Nederlands	**Gebruiksaanwijzing** Pagina 11-13	**Attentie!** ● Altijd eerst deze flap openslaan.
Italiano	**Istruzioni per l'uso** Pagina 14-16	**Attenzione!** ● Aprire sempre prima questa pagina pieghevole.
Dansk	**Betjeningsvejledning** Side 17-19	**Bemærk!** ● Denne klapside skal altid slås op som noget af det første.
Norsk	**Bruksanvisning** Side 20-22	**Merk!** ● Denne klaffsiden må alltid åpnes først.
Svenska	**Bruksanvisning** Sidan 23-25	**Obs!** ● Slå alltid upp den här fliken först.
Suomi	**Käyttöohje** Sivu 26-28	**Huom.!** ● Avaa aina ensin kääntösivu.

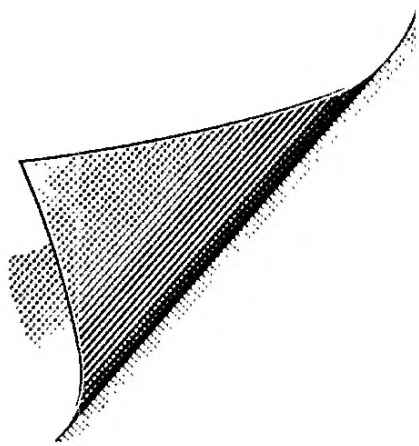

Downloaded from www.Manualslib.com manuals search engine

Information for users in the UK

(Not applicable outside the UK)

Service for you

Your colour television has been designed and manufactured to the highest standards, and subject to rigorous testing. Provided it is properly operated and maintained it will perform well for many years. However, we all know that in such complex equipment components can sometimes fail.
The legal responsibility for meeting any in-guarantee service needs for your receiver rests with the dealer from whom you bought it. Our own Service Division - Philips Service - provides your dealer with comprehensive technical advice, and distributes approved spare parts from Service Centres throughout the country. If your dealer has no service facilities, he can arrange for any work to be carried out by a competent third party organisation.
In any event you may expect speedy attention to restore your set to full working order without delay.

Free service for 12 months:
The dealer from whom the receiver was purchased will arrange for any defect in manufacture or material to be rectified without charge for a period of 12 months from the date of initial consumer sale provided:
- reasonable evidence is supplied that the set was purchased within 12 months prior to the date of claim
- the defect is not due to use of the set on an incorrect voltage or contrary to the Company's Operating Instructions or to accidental damage (whether in transit or otherwise); misuse; neglect; unauthorised or inexpert modification or repair.

The picture tube guarantee is administered by Mullard Limited, renowned manufacturer of colour picture tubes.
In addition to the customary 1 year free tube guarantee, Mullard will extend the guarantee period by a further 3 years for a nominal fee.
To register your tube guarantee please send:
a) your name and address;
b) your set's identity card (which will be returned to you);
c) a cheque/p.o. made out to 'Mullard Ltd' for £ 15.00 if you wish to extend your 1 year by a further 3 years;
to the following address:

Mullard Limited
Service Department
Free Post
Beddington Lane
Croydon CR9 9AU

Service after 12 months:
Continuing service after 12 months is available in the same way but the service will be chargeable.

These statements do not affect your statutory rights as a consumer.

If you have any question which your dealer cannot answer, please write to:

C.E. Consumer Relations Department
P.O. Box 298
420 London Road
Croydon CR9 3QR

All enquiries and claims can be handled more efficiently if accompanied by the Identity Card printed on the back cover of this booklet - this is provided for your reference and should be kept in a safe place.

Positioning the TV

For the best results, choose a position where light does not fall directly on the screen, and at some distance away from radiators or other sources of heat. Leave a space of no less than 3 cm all round the set for ventilation, making sure that curtains, cupboards etc. cannot obstruct the air flow through the ventilation apertures.
The set is intended for use in a domestic environment only and should never be operated or stored in excessively hot or humid atmospheres.

Mains connection

Before connecting the TV set to the mains, check that the mains supply voltage corresponds to the voltage printed on the type plate on the rear panel of the TV. If the mains voltage is different, consult your dealer.

Important
The wires in the mains lead are coloured according to the following code.

BLUE = NEUTRAL
BROWN = LIVE

If the mains plug (or adaptor) contains a fuse, the value of this fuse should be 3 amp. Alternatively, if another type of plug (not fused), is used, the fuse at the distribution board should not be greater than 5 Amp.
If the colours of the wires in the mains lead do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The BLUE wire should be connected to the terminal marked 'N' or coloured black.
The BROWN wire should be connected to the terminal marked 'L' or coloured red. Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Connecting the aerial

The aerial should be connected to the socket marked ⊥ at the back of the set. An inferior aerial is likely to result in a poor, perhaps unstable picture with ghost images and lack of contrast. Make-shift loft or set-top aerials are often inadequate. Your dealer will know from experience the most suitable type for your locality.
Should you wish to use the set in conjunction with other equipment, which connects to the aerial socket such as TV games, or a video camera it is recommended that these be connected via a combiner unit to avoid repeated connection and disconnection of the aerial plug.

General Points

Please take note of the section 'General' at the end of the English section in this booklet.

Interference
The Department of Trade and Industry operates a Radio Investigation Service to help TV licence holders improve reception of BBC and IBA programmes where these are being spoilt by interference. If your dealer cannot help, ask at a main Post Office for the booklet 'How to Improve Television and Radio Reception'.

Downloaded from www.Manualslib.com manuals search engine

Introduction

This television is easy to use if you perform the operations described in the order shown.

On the inside of the cover you will find a fold-out flap with drawings of the TV, which are accompanied by figures (e.g. 1). These figures correspond with the figures in the text. This enables you to easily locate the buttons and/or controls on the TV.

In most cases your dealer will have installed your TV set. If so, proceed directly to the section entitled 'Operating the TV'.

Important!

The following term is used in relation to the TV:



Programme numbers
These are the numbers which you assign to the stations you select. For example, the station which is the most important for you is assigned programme number 1, etc. enz.

Installation

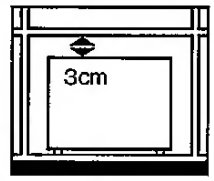

When positioning (building-in), leave a space of **no less then 3 cm** around the set for ventilation.

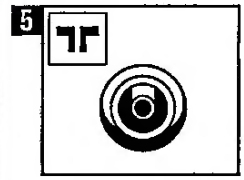

- Connect the aerial to socket ⊓ (on rear panel of TV).

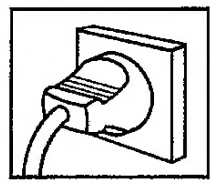

- Connect the TV to the mains. The mains voltage must correspond to the voltage shown on the type plate on the rear panel of the TV. If the mains voltage is different, consult your dealer.

Telescopic Aerial

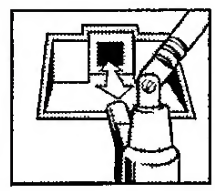

- Fit the aerial to the rear panel.
- Connect the aerial plug to socket ⊓.
- Extend and position the aerial.

Loop aerial (Uk only)

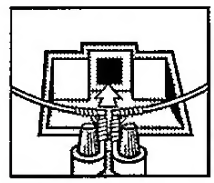

- Attach the ends of the loop to the mounting studs on the back cover and tighten the knurled nuts.
- Insert the plug on the flying lead into the aerial socket ⊓.
- Twist and tilt the loop to find the direction which gives the best picture.

Downloaded from www.Manualslib.com manuals search engine

Adjustment

Switching on/off

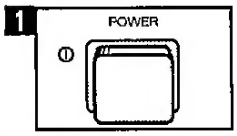

- To switch on: Press button ⏻.
A programme number will appear in the window.

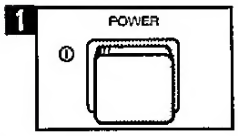

- To switch off: Press button ⏻ again.

Searching for and storing other TV stations in the memory

To store stations perform operations **A**, **B**, **C** and **D** in succession.

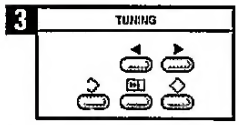

A Opening the memory
- Press button ◇. A programme number will start to flash.

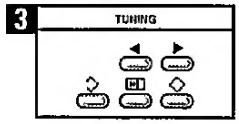

B Searching for the station
- Press button ⏯ **briefly.**

Either 1, 2 or 3 dashes* will appear in the window to indicete the wevelength on which TV stations are being sought.



* 1 dash = VHF I
2 dashes = VHF III
3 deshes = UHF

When a TV station appears on the screen, the same digit as for **A** will start to flash again. If the picture is poor or if it is not the station required, continue the search by briefly pressing button ⏯** again.

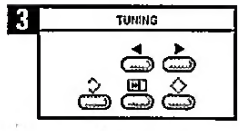

C Selecting the programme number of the TV station
- For programme numbers 0 to 9 simply press the required number.
- For programme numbers 10 to 19 first press button 1- and then the second number required.

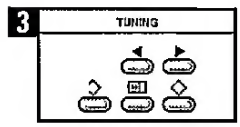

D Storing the selected TV stetion in the memory
- Press button ◇. The digit in the window will stop flashing. The TV station located is now stored under the selected programme number in the memory of the set.

** Instead of the automatic search, you mey tune manually using the buttons ◀ or ▶ located under TUNING.

Searching for and storing other TV stations

To search for and store other stations, repeat operations **A**, **B**, **C** and **D**.
In this way you can store all the stations to be received under programme numbers selected by you up to e maximum of 20 programme numbers.
If you connect a Video Recorder to the aerial socket ⊓, you can store the Video Recorder signal for reproduction under any available programme number.

Downloaded from www.Manualslib.com manuals search engine

Operating the TV

Selecting the required programme number

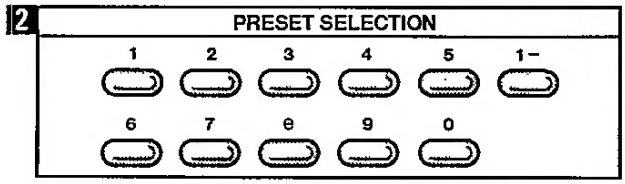

- For programme numbers 0 to 9 simply press the required number.
- For programme numbers 10 to 19 first press button 1- and then the second number required.

Adjusting Picture and Sound

Picture and sound can be adjusted by turning the following three knobs:



Volume ◿



Colour saturation ❁



Brightness ☼

Contrast

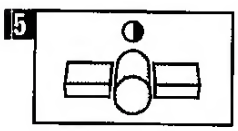

- The contrast (the black/white distribution) can be adjusted as required with the knob ◑ on the rear panel of the set.

Connection facilities

Aerial socket connection facilities

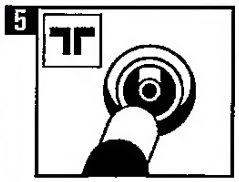

A Video Recorder, TV camera or TV game can be connected to this. To connect a Video Recorder proceed as follows:
I Connect TV aerial cable to input ⊓ of the Video Recorder.
II Connect the cable supplied with the Video Recorder to output TV of the Video Recorder and the aerial input ⊓ of the TV.
III Then tune to the signal from the Video Recorder for reproduction.
- Follow the same tuning procedure as described in 'Searching for and storing TV stations in the memory'.

Note: Consult the operating instructions of the Video Recorder to find out how to recognise the video signal.
- Store the video signal in the memory under an available programme number, as described in 'Searching for and storing TV stations in the memory'.

General

- If the TV picture or sound fails to give the desired result, check that the power is on, the aerial is connected and that all the controls are set correctly.
- If a bright white line appears on the screen, you should switch off the set and consult your dealer.
- The rear panel should only be removed by a service technician.
- If necessary, the TV may be cleaned with a damp chamois leather. Do not use cleaning agents containing alcohol, spirits or ammonia.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

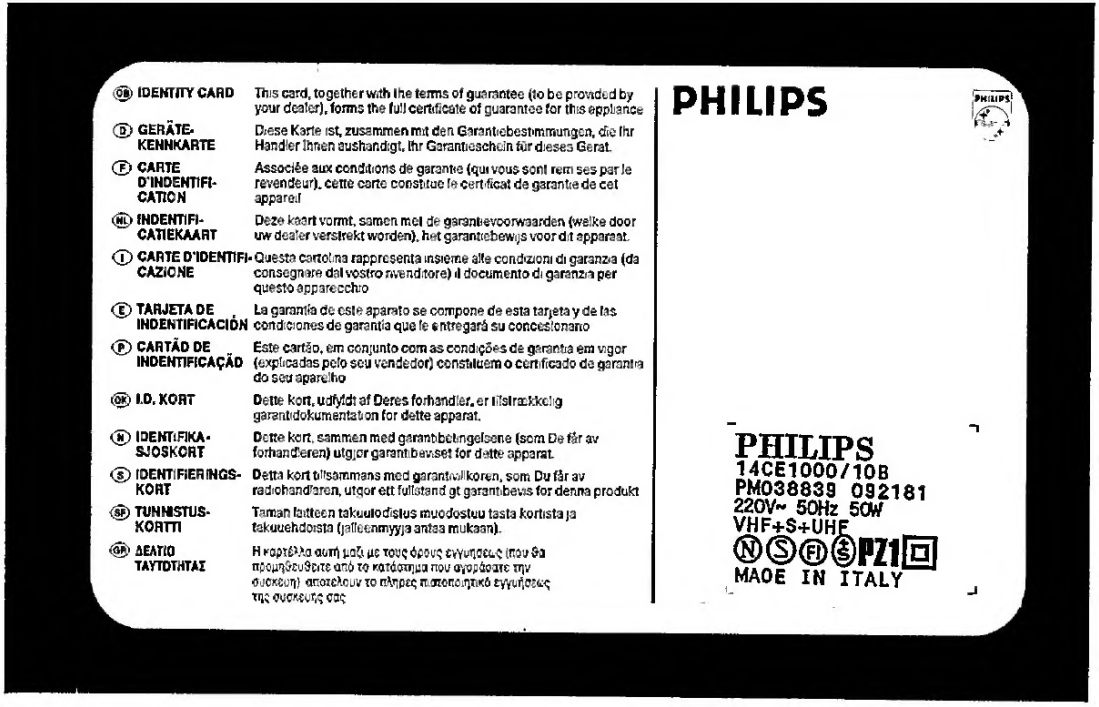

(GB)	**IDENTITY CARD**	This card, together with the terms of guarantee (to be provided by your dealer), forms the full certificate of guarantee for this appliance
(D)	**GERÄTE-KENNKARTE**	Diese Karte ist, zusammen mit den Garantiebestimmungen, die Ihr Handler Ihnen aushandigt, Ihr Garantieschein für dieses Gerat.
(F)	**CARTE D'INDENTIFI-CATION**	Associée aux conditions de garante (qui vous sont rem ses par le revendeur), cette carte constitue le certificat de garantie de cet appareil
(NL)	**INDENTIFI-CATIEKAART**	Deze kaart vormt, samen met de garantievoorwaarden (welke door uw dealer verstrekt worden), het garantiebewijs voor dit apparaat.
(I)	**CARTE D'IDENTIFI-CAZIONE**	Questa cartolina rappresenta insieme alle condizioni di garanzia (da consegnare dal vostro rivenditore) il documento di garanzia per questo apparecchio
(E)	**TARJETA DE INDENTIFICACIÓN**	La garantía de este aparato se compone de esta tarjeta y de las condiciones de garantía que le entregará su concesionario
(P)	**CARTÃD DE INDENTIFICAÇÃD**	Este cartão, em conjunto com as condições de garantia em vigor (explicadas pelo seu vendedor) constituem o certificado de garantia do seu aparelho
(DK)	**I.D. KORT**	Dette kort, udfyldt af Deres forhandler, er tilstrækkelig garantidokumentation for dette apparat.
(N)	**IDENTIFIKA-SJOSKORT**	Dette kort, sammen med garantibetingelsene (som De får av forhandleren) utgjør garantibeviset for dette apparat.
(S)	**IDENTIFIERINGS-KORT**	Detta kort tillsammans med garantivillkoren, som Du får av radiohandlaren, utgör ett fullstand gt garantibevis for denna produkt
(SF)	**TUNNISTUS-KORTTI**	Taman lattecn takuuehdoista muodostuu tasta kortista ja takuuehdoista (jalleenmyyja antaa mukaan).
(GR)	**ΔΕΛΤΙΟ ΤΑΥΤΟΤΗΤΑΣ**	Η καρτέλλα αυτή μαζί με τους όρους εγγυήσεως (που θα προμηθεύεστε από το κατάστημα που αγοράσατε την συσκευή) αποτελουν το πλήρες πιστοποιητικό εγγυήσεως της συσκευής σας

PHILIPS

PHILIPS
14CE1000/10B
PM038839 092181
220V~ 50Hz 50W
VHF+S+UHF
NSFIS PZ1
MADE IN ITALY

Printed in Italy by G.S.F. 88/12 11 10 9 8 7

3122 125 93911

Downloaded from www.Manualslib.com manuals search engine